


CS2RS Series Stepper Drive

CS2RS Series are closed loop stepper drive based on standard Modbus RTU protocol, using RS485 communication can network up to 31 axes, built-in

only solve the problem of step loss in the open loop stepper system, but also can save additional controllers in most of point-to-point applications, to greatly enhance system reliability and reduce the cost. CS2RS Series also support the feature of teaching, the operation modes of Profile Position, Profile Velocity and Homing. They can power 2-phase NEMA 8, 11, 14, 17, 23, 24, 34 stepper motors with 1000 ppr to 5000 ppr incremental encoders.

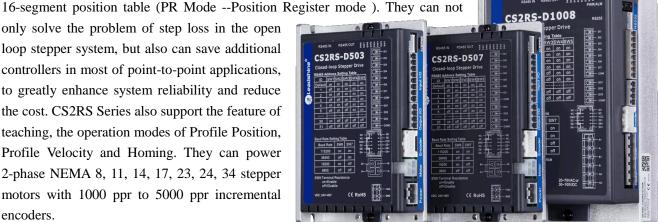

The CS2RS series is highly reliable, affordable and performs excellently in many industrial applications such as solar equipment, textile, civil, robotics, power generation equipment, 3C, packaging...

Feature

- No loss of step, No hunting, No torque reservation
- Low noise and vibration, smooth motion
- Support Modbus RTU protocol, Internal 16-segment position instructions
- Motion can be started by External IO or RS485
- Support operation modes: Profile Position, Profile Velocity, Homing
- 7 configurable digital inputs, 3 optically isolated digital outputs
- Limit +, Limit -, Origin, Quick stop, Enable, JOG +, JOG and Position Table inputs
- Alarm, Brake, Homing complete, In Position complete, instructions complete, Path complete outputs
- 20-50VDC supply voltage for CS2RS-D503, max output current 3A 20-50VDC supply voltage for CS2RS-D507, max output current 7A 18-80VAC or 30-100VDC supply voltage for CS2RS-D1008, max output current 8A
- RS232 communication for parameters configuration
- Encoder resolution: 1000 ppr to 5000 ppr for NEMA8/11/17/23/24/ 34 CS-M motors
- Protections for over voltage, over current and position following error, encoder cable error, etc.

Compare with Step/Direction

- Built-in single-axis control can save the PLC in most of point-to-point applications to reduce cost;
- Built-in rich diagnostic functions and input and output signals to setup easily;
- Modbus brings more expansion possibility to add value;



Model Designation

CS2 RS-D 50 7 - \square

1 2 3 4 5 6

Series Name

CS2: 2nd generation closed loop stepper drives

Communication Mode RS: RS485

Product Type D: Drive

Maximum Operating Voltage 50: 50VDC 100: 100VDC or 80 VAC

Maximum Output Current 7: 7.0A 8: 8.0A

Customerized Code Blank: standard


Technical Specification

| Name | CS2RS-D503 | CS2RS-D507 | CS2RS-D1008 | |
|-----------------------|-------------------------|---------------------------------|---------------------------------------|--|
| Supply Voltage | 20-50VDC | 20-50VDC | 30-100VDC or 18-80VAC | |
| Output Current (Peak) | 0.5-3.0A | 1.0-7.0A | 2.1-8.0A | |
| Size (H*W*L mm) | 118*79.5 | 5*25.5 | 151*97*53 | |
| Weight (kg) | 0.6 | 5 | 0.92 | |
| Matched Motor | NEMA 8, 11, 14, 17 | NEMA 17, 23, 24 | NEMA34 | |
| Input Signals | Limit +, Limit -, Origi | in, Quick stop, Enable | e, JOG +, JOG - and Position Table | |
| Output Signals | Brake, Alarm, In Posit | tion, GPIOs | | |
| Protection Functions | Over Current, Over Vo | oltage, Position Follov | wing Error, Encoder Cable Error, etc. | |
| PC Software | Leadshine ProTuner (| coming soon) | | |
| | Environment | Avoid dust, oil ,fog | and corrosive gases | |
| | Operating Temperature | 0-50°C (32 F − 122 F) | | |
| Operating Environment | Storage Temperature | -20°C-65°C (-4 F − 149 F) | | |
| | Humidity | 40-90%RH | | |
| | Vibration | 10-55Hz/0.15mm | | |
| | Mount | Vertical or horizontal mounting | | |




Dimension

Unit: mm (1inch=25.4mm)

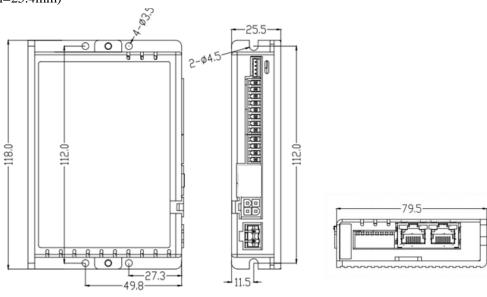

CS2RS-D503/507

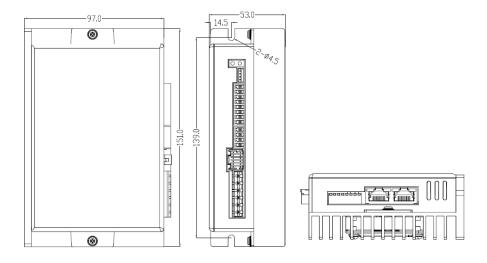


CS2RS-D1008

www.leadshine.com



Connector and Pin Assignment

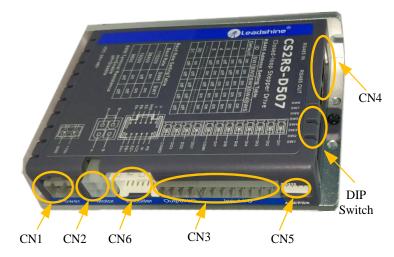

| Name | Description |
|------------|-------------------------------|
| CN1 | Input power connector |
| CN2 | Motor connector |
| CN3 | I/O signals connector |
| CN4 | RS485 communication connector |
| CN5 | RS232 tuning connector |
| CN6 | Encoder Signals Connector |
| | Salve ID: SW1-SW5 |
| DIP Switch | Baud Rate: SW6-SW7 |
| | Terminal Resistance: SW8 |

> CN1 &CN2 Input Power Connector

■ CS2RS-D503/507

| Name | Pic | PIN | Signal | Description |
|------|-----|-----|--------|----------------|
| CN1 | CN1 | 1 | VDC | 24V- 48V |
| CNI | | 2 | GND | GND |
| | CN2 | 4 | A+ | Motor phase A+ |
| CNIO | | 3 | B+ | Motor phase B+ |
| CN2 | | 2 | A- | Motor phase A- |
| | | 1 | B- | Motor phase B- |



■ CS2RS-D1008

| Name | Pic | PIN | Signal | Description |
|------|----------|-----|-----------------------|----------------|
| | | 1 | A+ | Motor phase A+ |
| | CN1& CN2 | 2 | B+ | Motor phase B+ |
| CN1& | | 3 | A- | Motor phase A- |
| CN2 | | 4 | В- | Motor phase B- |
| | 5 | AC | 18-80VAC or 24-100VDC | |
| | | 6 | AC | no polarity |

Note: When the user uses an AC transformer to supply power,

Be sure to use an isolation transformer to prevent electric shock or burn out the computer.

> CN3-I/O Signals Connector

| Name | Pic | PIN | Signal | I/O | Description |
|--------|------------|-----|--------|-----|--|
| | | 1 | DI1 | I | |
| | 7.0 | 2 | DI2 | I | |
| | 70 | 3 | DI3 | I | Configurable Single-ended Digital |
| | L . | 4 | DI4 | I | Inputs DI1-DI7, 12V - 24V. |
| | L . | 5 | DI5 | I | DI1 is enabling signal default, DI2-DI7 are GPIOs. |
| G) V I | <u> </u> | 6 | DI6 | I | 512 517 die G1 103. |
| CN4 | <u> </u> | 7 | DI7 | I | |
| | [| 8 | COMI | I | |
| | 7-0 | 9 | DO1 | О | Configurable Single-ended Outputs |
| | <u></u> | 10 | DO2 | О | Signals DO1-DO3 (common-cathode |
| | <u></u> | 11 | DO3 | О | or common-anode), |
| | 5 | 12 | СОМО | О | Max. 24V/100mA, GPIOs. |

Note:(1) DI or DO is shown as SI or SO in Leadshine MotionStudio.

- (2) DI1 is normally closed, default by Enable signal. It means the motor is locked shaft after the driver powered on.
- (3) When using brake output signals you need to connect a relay and a diode.

> CN4-RS485 Communication Connector

| Name | Pic | PIN | Signal | Description |
|------|-----|-----|--------|-------------|
|------|-----|-----|--------|-------------|



| | | 1 | RS485+ | RS485 TxD+ |
|-----|----|--------------------------|--------|------------|
| | | 9 | | RS485 RxD+ |
| | 1 | 2 | DC405 | RS485 TxD- |
| CN4 | 8 | 10 | RS485- | RS485 RxD- |
| | , | 5, 6, 13, 14 | GND | GND |
| | 16 | 7, 8, 15, 163, 4, 11, 12 | NC | Received |
| | | Connector cover | PE | Shield GND |

> CN5-RS232 Tuning Port

| Name | Pic | PIN | Signal |
|------|-----|-----|--------|
| | 3 | 1 | NC |
| GN. | | 2 | TxD |
| CN5 | 2 | 3 | GND |
| | 11 | 4 | RxD |


> CN6-Encoder Input Signals Connector

| Name | Pic | PIN | Signal | Description |
|------|-----|------------|--------|------------------------------|
| | | 1, 2, 3, 4 | NC | Reserved |
| | | | 5 | EA+ |
| | | 6 | EA- | Encoder signal of phase A- |
| | 201 | 7 | EB+ | Encoder signal of phase B+ |
| CN6 | | 8 | EB- | Encoder signal of phase B- |
| | | 9 | EZ+ | Encoder Z+ signal (optional) |
| | | 10 | EZ- | Encoder Z- signal (optional) |
| | | 11 | VCC | Encoder +5V voltage |
| | | 12 | GND | Encoder ground |



> DIP Switches

The CS2RS series drives use an 8-bit DIP switched to set Salve ID (also called Site Alias), Baud Rate and Terminal Resistance, they are shown as below:

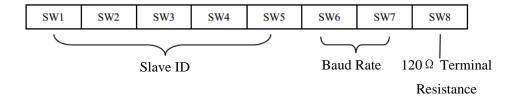

(1) Slave ID: SW1-SW5 (off=1, on=0)

| Slave ID | SW1 | SW2 | SW3 | SW4 | SW5 |
|-------------|-----|-----|-----|-----|-----|
| 1 (default) | on | on | on | on | on |
| 1 (factory) | off | on | on | on | on |
| 2 | on | off | on | on | on |
| 3 | off | off | on | on | on |
| 4 | on | on | off | on | on |
| 5 | off | on | off | on | on |
| 6 | on | off | off | on | on |
| 7 | off | off | off | on | on |
| 8 | on | on | on | off | on |
| 9 | off | on | on | off | on |
| 10 | on | off | on | off | on |
| 11 | off | off | on | off | on |
| 12 | on | on | off | off | on |
| 13 | off | on | off | off | on |
| 14 | on | off | off | off | on |
| 15 | off | off | off | off | on |
| 16 | on | on | on | on | off |
| 17 | off | on | on | on | off |
| 18 | on | off | on | on | off |
| 19 | off | off | on | on | off |
| 20 | on | on | off | on | off |
| 21 | off | on | off | on | off |
| 22 | on | off | off | on | off |
| 23 | off | off | off | on | off |
| 24 | on | on | on | off | off |
| 25 | off | on | on | off | off |
| 26 | on | off | on | off | off |
| 27 | off | off | on | off | off |

Datasheet of CS2RS Series Stepper Drive



| 28 | on | on | off | off | off |
|----|-----|-----|-----|-----|-----|
| 29 | off | on | off | off | off |
| 30 | on | off | off | off | off |
| 31 | off | off | off | off | off |

Note: (1) When the SW1-SW5 is default (all are on), the Slave ID can be configured by the PC software

(2) Baud Rate: SW6 - SW7

| Baud Rate | SW6 | SW7 |
|------------------|-----|-----|
| 115200 (Default) | on | on |
| 38400 (Factory) | off | on |
| 19200 | on | off |
| 9600 | off | off |

Note: (1) When the SW6-SW7 is default (all are off), the Baud Rate can be configured by the PC software

(3) Terminal Resistance Selection: SW8

SW8=ON: terminal resistance is valid;

SW8=OFF: terminal resistance is invalid (factory setting)

Note: (1) The last slave in the network needs to connect a 120Ω terminal resistance, it means set the SW8 to on

Wiring

